

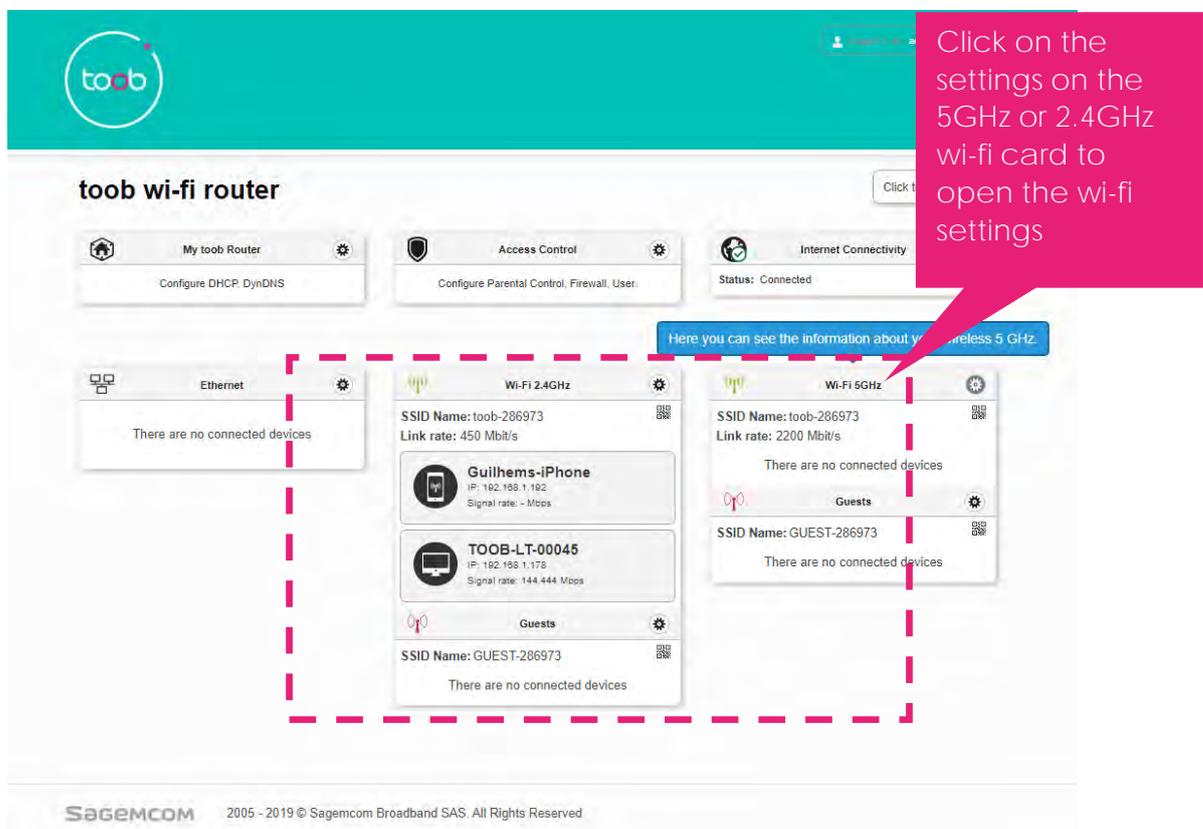


# changing your wi-fi name and password

Log in to your toob router by going to entering "192.168.1.1" into the URL of a device connected to your router.

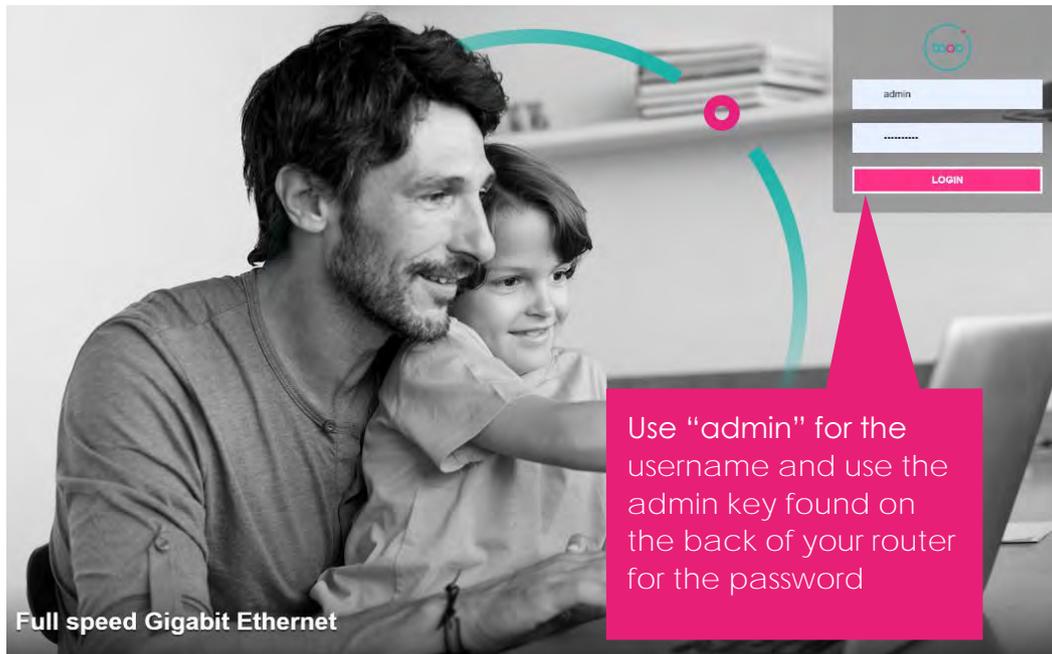

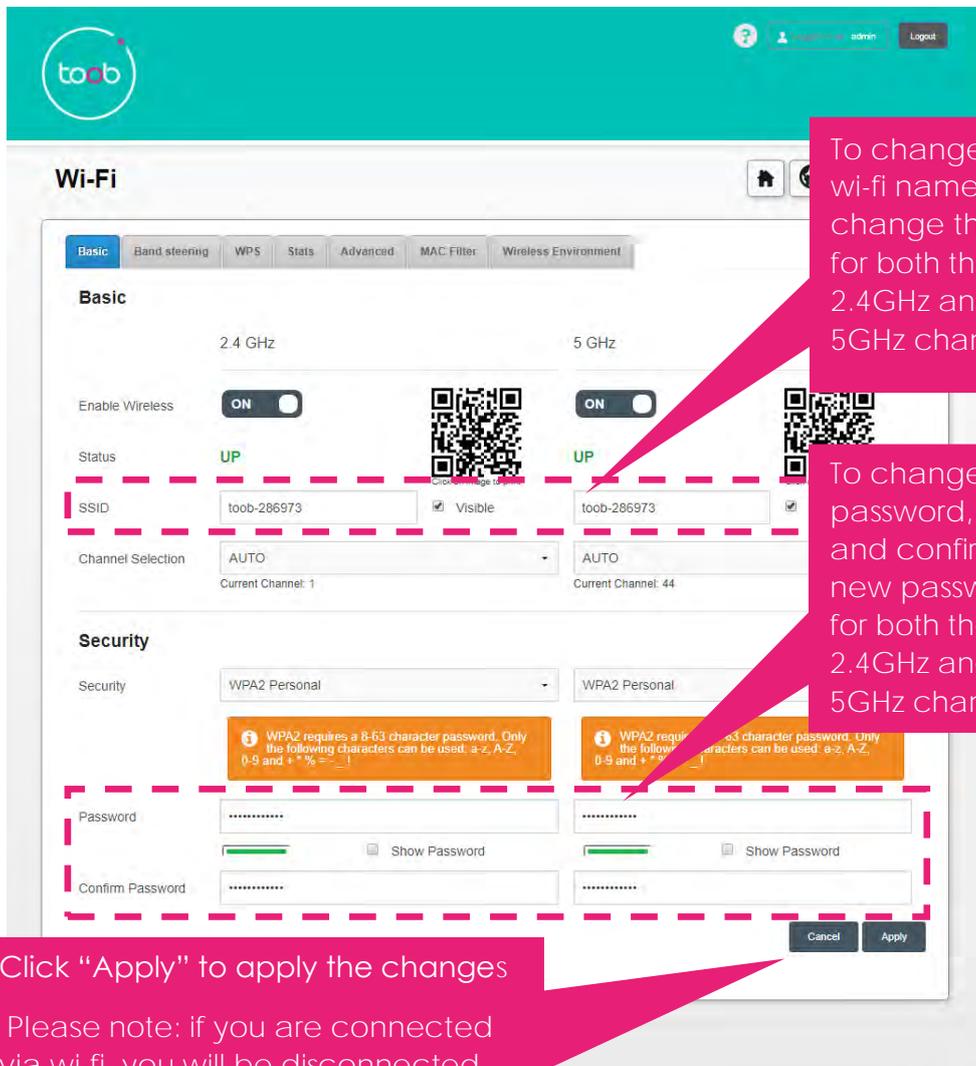

To change your wi-fi name, change the SSID for both the 2.4GHz and 5GHz channels\*

To change the password, enter and confirm the new password for both the 2.4GHz and 5GHz channels\*

Click "Apply" to apply the changes

Please note: if you are connected via wi-fi, you will be disconnected from the router when the changes are applied and will have to connect again using the new wi-fi name and password

\*Your router uses 2.4GHz and 5GHz frequencies to connect to different devices, to ensure all your devices can connect using the same password you must make sure both channels have the same name and password and your devices should connect to the best channel automatically